


1 Clean & dry




Remove dust and grease with a surface-safe, residue-free cleaner. Let dry completely.

2 Rub over the design

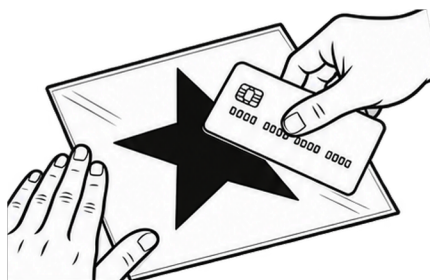


Use a card or smooth, firm tool. Rub firmly back and forth over the vinyl design.

3 Lift film + decal

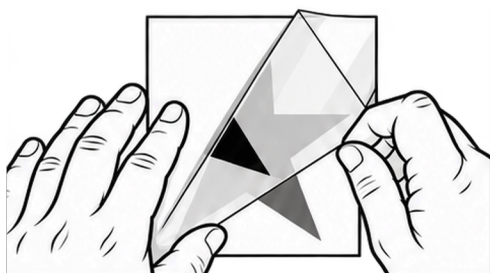


Slowly lift the transfer film with the decal from the backing.

4 Position & apply

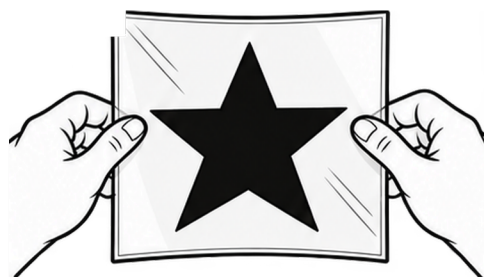


Align carefully. Apply gradually from one edge, smoothing as you go.

5 Rub over all details

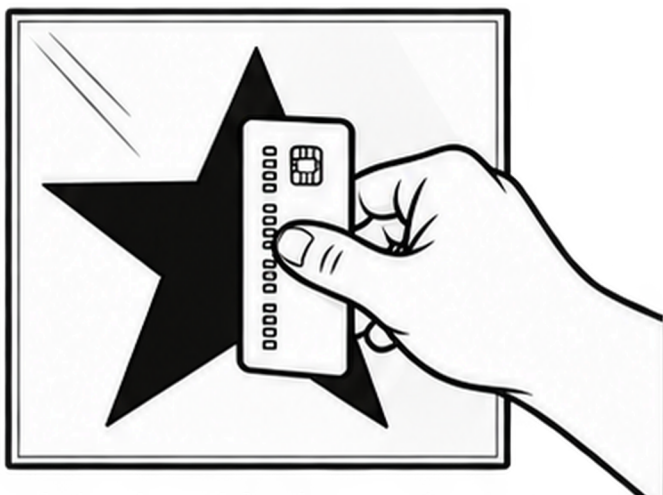

Rub firmly back and forth over the design, especially small details.

6 Remove the transfer film

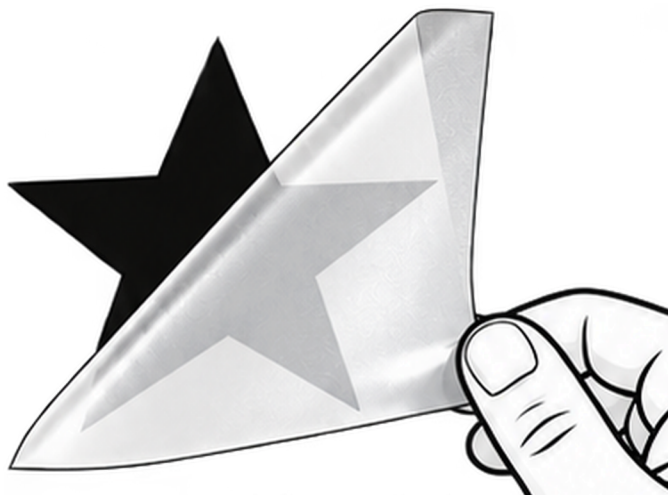

Start at a corner. Peel diagonally down and back, close to the surface.


Peel slowly. Never pull sharply.

Detail lifting? Stop, lay the film back, rub and try again.

For small details and troubleshooting, see the reverse side.

SMALL DETAILS & HELPFUL TIPS

KNOW THE THREE LAYERS

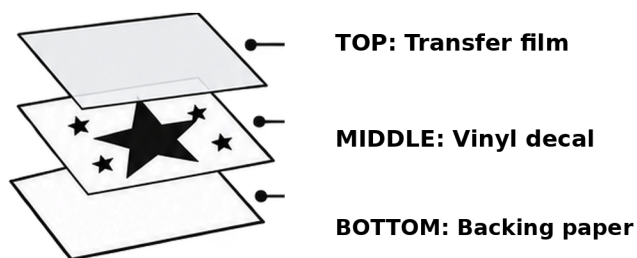

The transfer film holds every separate piece in position.

BEFORE YOU START

Work in a clean, well-lit place, away from dust, hair and pet fur.

Remove dust and grease with a surface-safe, residue-free cleaner. Let dry completely.

Use clean, dry hands, free from oil or hand cream.

Avoid touching the adhesive. Dust, hair and fingerprints can affect adhesion.


1. LIFTING THE FILM FROM THE BACKING

Peel slowly and watch every small detail and thin line.

If a detail stays on the backing, stop. Lay the film back over that spot. Rub firmly back and forth over the detail with a card, then try again. Repeat if needed.

If this does not help, carefully lift the detail's edge with a fingernail and help it stick to the transfer film. Avoid touching the adhesive or stretching the vinyl.

If the whole design stays behind, lay the film fully back down and rub firmly over the entire vinyl design.

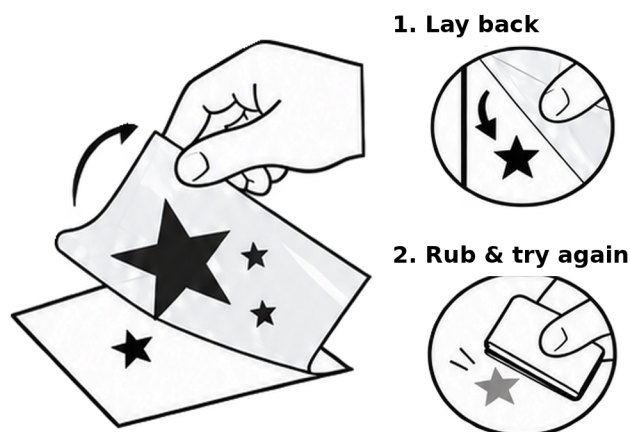


2. REMOVING FILM AFTER APPLYING

Start at an upper corner, preferably beside a larger, solid part of the design rather than a tiny detail. Peel diagonally down and back, keeping the film close to the surface.

If a detail stays on the film, stop. Lay the film back over it, rub firmly through the film with a card and slowly try again.

Only if it still lifts, gently hold the detail against the surface with a clean fingertip while continuing to peel. Do not touch the adhesive.

After removal, gently rub over the small details again.

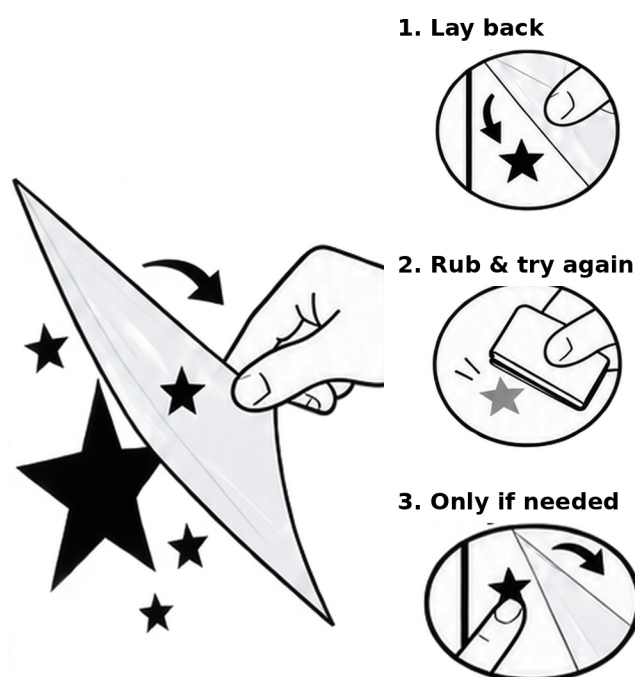

CHECK EVERY SMALL DETAIL

Watch carefully as you peel. Before discarding the backing or transfer film, check that no small vinyl pieces were left behind.